


Assembly instructions

IN030 Rectangular Textile Desk 80



The contents of the package:

- A. Carry bag: 1 pc.
- B. Wooden tops: 2 pcs.
- C. Aluminum tubes: 4 pairs.
- D. Desk customization: 1 pc.

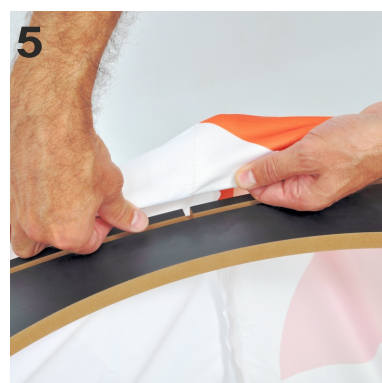

1. Place the wooden top with the inner cutout on the floor with the white side up.

2. Take four aluminum tubes and screw each tube into the dedicated hole on the tabletop. Proceed in the same way until you screw all four tubes as shown in the picture

3. Turn the assembly thus formed with the wooden top up as shown in the nr.3 image.

4. Place the desk customization outside the aluminum tubes of the assembly as in the image. Make sure that the customization is positioned in the same direction as the formed assembly i.e. with the bottom side up.

5. The personalization of the desk is provided with a silicone strip that must be inserted into the perimeter groove on the counter. Make sure the customization is positioned correctly by aligning the customization seam with the cutout on the tabletop.

6. Continue to insert the silicone strip into the perimeter groove around the countertop until it is completely inserted, as in the image.

The pictures are for presentation purposes only. Your product may be slightly different.

Assembly instructions

IN030 Rectangular Textile Desk 80

7



8



7. Position the second wooden top, the one without cutout on the floor with the white side up.

8. Screw the rest of the aluminum tubes into the dedicated holes on the wooden top. Continue in this way until you screw all four tubes as shown in the pictures.

9



10



9-10. Firstly turn over the wooden top with the inner cutout and personalization and position the second wooden top over the first, as in the attached image. The top aluminum tubes will join the bottom ones as in the images.

11



11. Lift the personalization from the bottom up, twist the silicone strip under the fabric until it is no longer visible and insert it into the perimeter groove on the counter. Make sure the customization is positioned correctly by aligning the customization seam with the cutout on the tabletop. Continue to insert the silicone strip into the perimeter groove around the countertop until it is completely fixed.



For the Desk version with the lighting option, insert the plug corresponding to the power cable into the socket.

Now the Rectangular Textile Desk 80 is ready for display.

The pictures are for presentation purposes only. Your product may be slightly different.