

Assembly instructions


PO071 PopUp ARC 7x3 straight

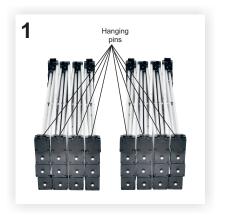




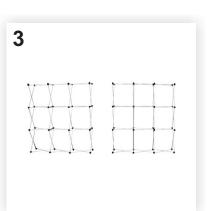



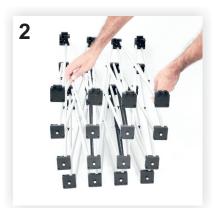



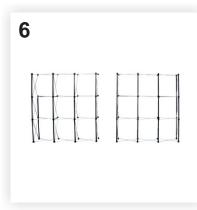

The contents of the package:

A. Rigid case: 2 piecesB. PopUp graphic: 9 panels

C. PopUp graphic: 9 paneis

D. Metal bars and textile bag: 30

pieces

E. Spotlight: 2 pieces.

- 1. Place the PopUp frame (C) on the floor ensuring the row of the hanging pins is at the top-front of the frame, as in the picture.
- 2. Expand the frames (C) to their sizes by pulling up two of the black pieces of plastic. The structures will extend both vertically and horizontally.
- 3. After expanding the structures, place them side by side, keeping an empty space the size of a column between the two structures, like in the picture.
- 4. Attach the metal bars (D) from top to bottom starting from the black plastic nodes with pins: insert the tip of the metal bar into the slot under the black node, as in the picture.
- 5. The square at the bottom of the metal bar will be fixed into position by sliding it from right to left until it overlaps the black plastic node, like in the detailed image.
- 6. Continue in the same way attaching all the metal bars in a vertical line until you get ten vertical lines of three bars each: eight lines in the front and two lines in the sideback. Now the PopUp frame (C) is assembled.

Page 1

Assembly instructions


PO071 PopUp ARC 7x3 straight








7-8. Hook on the spotlights (E) at the top of the PopUp structure in the left side of the aluminum bars intersection: insert the end of the spotlight support rod provided with grooves between the two aluminum bars (see the detailed picture). The spotlights can be mounted on top of any of the six columns of the system.



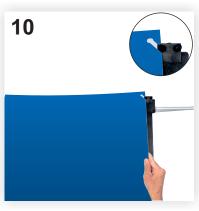

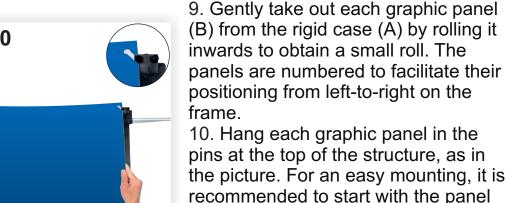

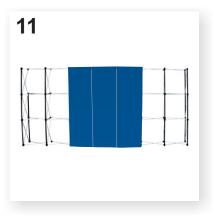

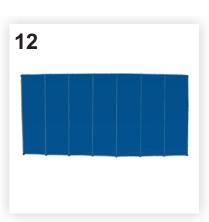

11-12. Unroll the graphic panel to its full lenght and attach it to the metal bars. The edge of each panel will be positioned on the middle of the metal bar, the other half remaining free for attaching the next panel.

number 5 which will be mounted on the space between the two structures C. Then continue with the other strips,

mounting one strip to the left and right

of the mounted strips.



13. After attaching the front panels, you can fix into position the side panels: 1 and 8. Bend the side panels in the shape of a semi-cylinder and hang them with one edge in front and the other behind the frame to form the sides of the PopUp. To move the PopUp system, it is recommended to hold it from the black pieces of plastic on the back.

Page 2

The pictures are for presentation only; your product can be slightly different!